


# K32LCD/K32LX LCD Keypad Quick Start

P ▲ R ▲ D O X™

## Overview

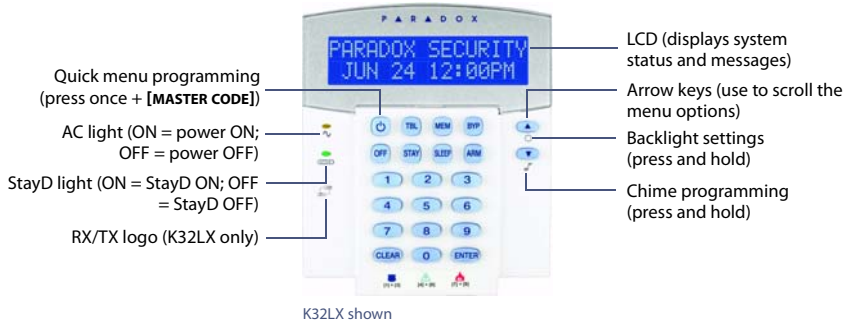

## How to Arm

**NOTE:** To arm with StayD enabled, refer to the StayD User Manual, available at [paradox.com](http://paradox.com)>StayD. To learn more about StayD, contact your installer.

### Arming When Exiting (Regular Arm)

To arm your system when exiting:

Step	Description
1.	Close all zones in desired partition.
2.	Press [ARM] and enter your [ACCESS CODE].

### Arming When Staying (Stay/Sleep Arm)

To arm your system when staying:

Step	Description
1.	Press [STAY] for Stay arming or [SLEEP] for Sleep arming, and enter your [ACCESS CODE].
2.	Select the desired partition (1 or 2). For both, press one, then the other after the beep.

## How to Disarm

To disarm your system when entering:

<i>Step</i>	<i>Description</i>
1.	Press <b>[OFF]</b> and enter your <b>[ACCESS CODE]</b> .
2.	Select the desired partition ( <b>1</b> or <b>2</b> ). For both, press one, than the other after the beep.

## Panic Keys

To send a silent or audible alarm to your security company, press and hold one of the key combinations listed below, for two seconds.

<i>Panic Alarm</i>	<i>Key Combination</i>
<b>Police</b>	<b>[1] &amp; [3]</b>
<b>Medical</b>	<b>[4] &amp; [6]</b>
<b>Fire</b>	<b>[7] &amp; [9]</b>

## Alarm Memory Display

To view the alarms that occurred during the last armed period:

<i>Step</i>	<i>Description</i>
1.	Disarm the system.
2.	Press <b>[MEM]</b> . All zones that were breached during the last armed period will be displayed. Use the arrow keys to view zones.
3.	Press <b>[ENTER]</b> to save and exit.

## Trouble Display

The LCD screen will display all troubles when they occur. To view and clear troubles:

<i>Step</i>	<i>Description</i>
1.	Press <b>[TBL]</b> .
2.	Scroll through the list of troubles using the arrow keys. Refer to the MGSP User Guide for trouble descriptions and instructions.
3.	Perform the recommended repair instruction to clear the trouble. If no instructions are given, contact your security company.
4.	Press <b>[CLEAR]</b> to exit.

## How to Bypass Zones

When a zone is bypassed, it remains unarmed once the corresponding area is armed. To bypass zones:

<i>Step</i>	<i>Description</i>
1.	Press <b>[BYP]</b> .
2.	Enter your <b>[ACCESS CODE]</b> .
3.	Select the zone you want to bypass by entering the zone number, e.g., zone 3 = <b>03</b> ).
4.	Press <b>[ENTER]</b> .

© 2010 Paradox Ltd. All rights reserved.  
Specifications may change without prior notice.  
For complete patent, trademark, certification, and warranty information, please visit [www.paradox.com](http://www.paradox.com).