

MAGELLAN™

K32IRF - User's Quick Reference Guide

KEYPAD OVERVIEW

TX

Fast Flash = Communication with panel in progress

StayD

On = StayD enabled
Off = StayD disabled

Zone Status

Keys



= Press once + [MASTER CODE] for Quick Menu programming



= Press & hold for keypad settings




= Press & hold for chime programming

Zone Display:

Numbers [1] to [32] correspond to zones 1 to 32 respectively. Open or entry delay zones are illuminated, and flash in alarm.

Partition Status

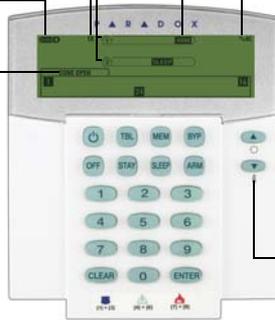

Arm / Sleep / Stay:

On = Partition armed
Off = Partition disarmed
Flash = Exit Delay
Fast Flash† = Exit Delay (final 10 sec.)
Fast Flash† = Partition in alarm

†Audible Indicators:

Continuous beep = Alarm
Variable beep = Fire alarm
Intermittent beep = Beginning of exit delay
Fast beep = Final 10 sec. of exit delay

Info:

Refresh display to see all open zones

[TBL] Trouble display

On = Trouble(s) occurring

[MEM] Alarm memory display

On = Alarm(s) occurred

[BYP] Bypass programming

On = Zone(s) bypassed

ARMING AND DISARMING

TO ARM WHEN LEAVING...



To Regular Arm:

1. Close all zones in the desired partition.
2. Enter your [ACCESS CODE]† or [ARM] + [ACCESS CODE]

TO ARM WHEN STAYING...



To Stay Arm:

1. Press the [STAY] key.
2. Enter your [ACCESS CODE]†.

To Sleep Arm:

1. Press the [SLEEP] key.
2. Enter your [ACCESS CODE]†.

To Disarm:

[OFF] + [ACCESS CODE]†

† If needed, press button(s) corresponding to desired partition(s). For two partitions, press the other key after the confirmation beep.

PANIC ALARMS

To send a silent or audible alarm to your monitoring station, press and hold one of the following combinations for 3 seconds.

| Panic Alarm Type | Button Combinations |
|------------------|---------------------|
| Police | Press [1] & [3] |
| Medical | Press [4] & [6] |
| Fire | Press [7] & [9] |

ALARM MEMORY DISPLAY

To view the alarms that occurred during the last armed period:

1. Disarm the system.
2. Press the [MEM] key.
3. The corresponding zone numbers that were in alarm the last time the system was armed will appear on the screen.
4. To exit, press [CLEAR].

TROUBLE DISPLAY

1. Press the [TBL] key. The word 'Trouble' and the number(s) corresponding to the trouble(s) are displayed on the screen.
2. Read the corresponding explanation of the trouble from the trouble list in the MG/SP User Guide. If no repair instructions are given, call your security company for repairs.
3. To exit, press [CLEAR].

KEYPAD SETTINGS

To mute the keypad:

Press and hold the [CLEAR] key for 10 seconds to enable or disable Keypad Muting.

To adjust the backlight level:

1. Press and hold the [▲] key for 4 seconds.
2. Keys [1] and [2] flash.
3. Press [1], then use the [▲] and [▼] to adjust.
4. To save and exit, press [CLEAR] or [ENTER].

To adjust the backlight delay:

1. Press and hold the [▲] key for 4 seconds.
2. Keys [1] and [2] will flash.
3. Press [2], then use the [▲] and [▼] to adjust.
4. To save and exit, press [ENTER].

BYPASS PROGRAMMING

Bypassed zones remained unarmed when the partition is armed.

1. Press the [BYP] key.
2. Enter your [ACCESS CODE]†.
3. The corresponding zone number will be displayed on the screen when open. Select the zone(s) you want to bypass by entering the two-digit zone number. For example, to enter zone 3, enter [0] then [3]. The corresponding zone indicator will flash.
4. To save and exit, press [ENTER].

CHIME PROGRAMMING

A Chime Enabled zone will advise you every time it is opened by causing your keypad to beep.

1. Press & hold the [🔔] key. The word 'Chime' appears on the screen.
2. Select the zones you want to Chime by entering the two-digit zone number. The corresponding zone number flashes. For example, to chime zone 2 enter [0] then [2]. The keypad automatically saves once the 2-digit zone number is entered.
3. To save and exit, press [ENTER].

© Paradox Security Systems Ltd., 2008. Magellan is a trademark or registered trademark of Paradox Security Systems Ltd. and its affiliates in Canada, the United States and/or other countries. All rights reserved.